PREMIER®

MANUAL DE INSTRUCCIONES
PREMIER DELTA TABLET (9”)
TAB-5076-8G

ESTIMADO CLIENTE
Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
INTERFACE PRINCIPAL 3
CONFIGURACIÓN DE WI-FI 3
BÚSQUEDA DE ARCHIVOS 4
CONEXIÓN USB Y TARJETA TF 4
INSTALAR O DESINSTALAR SOFTWARE 5
OTRAS APLICACIONES 5

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

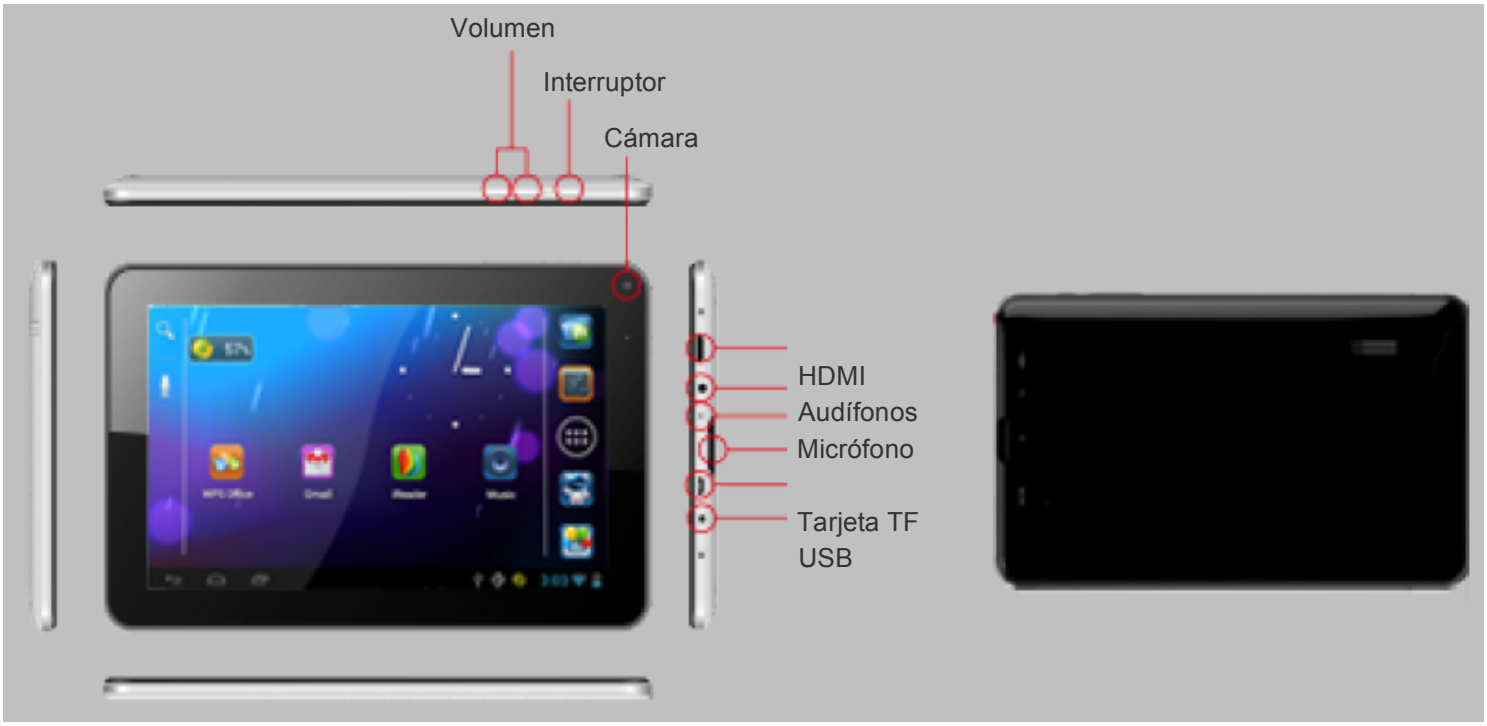

ENCENDER/APAGAR

Presione el botón de encendido que se encuentra en la esquina superior derecha. Para apagar, presione nuevamente.

INTERFACE PRINCIPAL

CONFIGURACIÓN DE WI-FI

- Abra la pestaña Aplicaciones en la interface principal, y haga clic en Configuración.
- Elija la opción Red Inalámbrica y haga clic en Wi-Fi, Configuración de Wi-Fi.
- Haga clic para conectar la tableta a la red. Si se requiere una contraseña, deberá introducirla. Ahora la unidad muestra que está Conectada.
- Al terminar esta configuración, regrese a la interface principal, donde podrá navegar con el buscador.

BÚSQUEDA DE ARCHIVOS

- En la interface principal, haga clic en el ícono de Aplicaciones, y luego haga clic en Administrador de Recursos.
- Cuando se muestre una lista de archivos, puede deslizarse a través de ella.
- Haga clic en la carpeta o archivo deseado para abrirlos.
- Haga clic en el botón de regresar en la barra de estado para regresar a la interface anterior.
- Haga clic en el botón Home de la barra de estado para volver a la interface principal.
- Presione de manera prolongada el archivo o la carpeta para mostrar un submenú con varias opciones: copiar, borrar, mover, pegar, renombrar, entre otras. Si no desea ejecutar la operación, presione el botón de cancelar.

CONEXIÓN USB Y TARJETA TF

- Conecte un cable USB que una la tableta con el computador. Si la conexión es exitosa, la tableta lo indicará en la pantalla.
- Una vez estén conectados la tableta y el computador, usted puede copiar datos entre ellos.
- Para desconectar, haga clic en el ícono de disco removible, y luego en la ventana de retiro seguro.
- Si coloca un Tarjeta TF, recuerde igualmente retirarla de modo seguro.

INSTALAR O DESINSTALAR SOFTWARE

- El sistema operativo de la tableta es Android 4.1. Este es necesario para el formato APK.
- La tableta tiene soporte para muchas aplicaciones populares de terceros.
- Una vez se instale la aplicación, esta aparecerá en la barra de aplicaciones.
- Si desea desinstalarla, haga clic en Configuración y Proceso de Aplicación. Elija la aplicación y haga clic en desinstalar.

OTRAS APLICACIONES

- La tableta tiene soporte para reproducción de video en HD, imágenes y música.
- Copie los archivos a la tableta y haga clic sobre ellos para reproducirlos.
- También puede utilizar la tableta para tomar fotografías o vídeos. Haga clic en el icono de cámara. Aquí tendrá un menú para hacer algunos ajustes a la imagen.

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.
- El robot Android™ se reproduce o modifica a partir del trabajo creado y compartido por Google y es usado de acuerdo a los términos descritos en la licencia de reconocimiento 3.0 de bienes comunes creativos.
- Android™ es una Marca Registrada de Google Inc.

PREMIER®

INSTRUCTION MANUAL

PREMIER DELTA TABLET (9”)

TAB-5076-8G

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

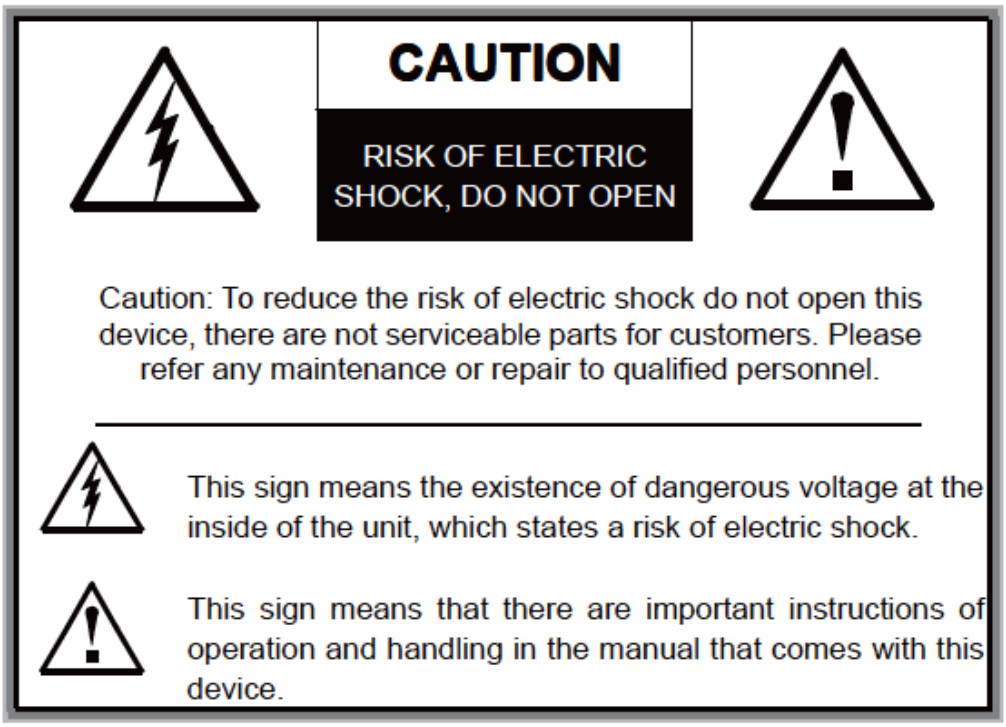
CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.
This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.
This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Turn on/off

• Power up the device: Hold down the right power button of the device, which is located at the upper right corner.

• To turn off the device, hold down the button which is located at the top upper right corner until the monitor shows the "OFF" option. Click on the OFF option and click on the "OK" button. The monitor will turn off after a few seconds. To restart the monitor, press the power switch again.

Main men

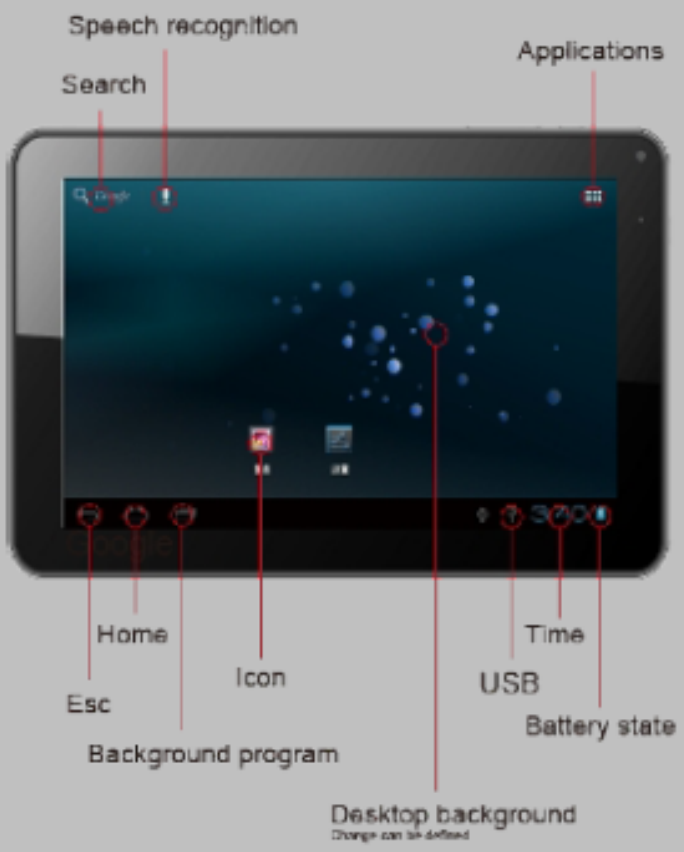

Wi-Fi settings

• Open the Applications tab In the main interface, then click "Settings"
• After Choose: "Wireless network" click "Wi-Fi", click on "Wi-Fi settings"
• Click connect to network, that will be can connected, if the network requires a password, enter the correct password in the password bar, WALN shows "Connected."
• Network settings after completion, return to the main interface, then, you can use the network, and can be in the browser's address bar, enter the desired website address..
•Open the webpage, click or sliding webpage, click the link to open the linked page.

Browse the file or folder

• In Desktop state, click the application bar icon, enter into the application field, click into the" resource manager."
• In the file list can be clickable sliding, rolling.
• Click on the required file or folder, can open the file or folder.
•Click the status bar of the back button to return to the level folder.
• Click the Home button on the status bar, you can return to the home page.
•Long press a file or folder, can popup a menu, for example: "Copy, delete, move, paste, rename" and other additional options. If you do not execute the operation, click on the Cancel button. directly

USB connection

• Connect USB line interface, plug in the machine of right side USB interface, the other point is inserted in the computer USB interface connection, drag down the status bar, and then show USB connection status, that will be appear "USB connection", prompting USB connection.
• If successful, your computer will be appear a new removable disk.
• On the computer desktop to open "My Computer", double-click the new removable disk, where the data can be copied, deleted by machine
• Disconnect: Click the bottom left of the screen arrow to the removable disk icon, pop up a small window safe deletion mobile disk.

Install / uninstall software

•MID operating system default for Android 4.1 version, install the software required to process the format is*. Apk format.
• MID supports many popular third-party application software formats
• MID can be installed or uninstalled you need software.
• To install an application, the need to*. Apk format copied to your MID , then open" resource manager", click to install*. Apk file.
• Installed application, will appear in the application bar.
• If want to installed software, click "setting" enter into "application process" bar, then Clck :"application", click on the software you want to ininstall. then click unstall.

Other application

Multimedia
• MID can support HD video playback, photo viewing, and music.
• Firstly. need to play music, video, photos copy to the MID .
• Click the application icon, after enter, click on the corresponding icon, such as "video" "picture" "music" into the corresponding interface.
• Click the file of play, it can be play file.

Filming
• MID have camera equipment, can photograph and taking pictures.
• Click the application bar, click on the "camera" icon, you can practice taking pictures and filming video, and in the corresponding function menu set the video clarity and screen size.

* Note: Use MicroTF (SD) card, if you want to pull out the TF card, safe operation is the select Settings - > memory - > unload TF card.

Connected to the computer, please do not use online video and games.

* Disclaimer Note: product appearance, technical parameter, function, price, please take the actual product and the product specification, nameplate shall prevail, as a result of technology to update the changes, without notice.